

# ERA

## 801-12 Window Snaplock Fitting Instructions

### Installing a Window Snaplock

To fit a Window Snaplock you will require the following tools:

- Bradawl (or drill with 2.5mm drill bit)
- Posidriv screwdriver
- Pencil

**Note: If fitting to hardwood drill 2.5mm pilot holes**

**A** Close window and select position of Snaplock(s). Lock should be fitted as close to the window fastener as possible:

- ◀ Position if fitting single lock
- ◀ Position if fitting two locks

**B** Place lock mechanism onto striking plate and mark position of striking plate on window edge. Release lock mechanism from striking plate then screw striking plate onto window edge with cut out facing frame.

**C** Snap the lock mechanism onto the fixed striking plate and mark screw positions. Remove lock body and drill pilot holes (opening window if necessary). Snap lock back onto striking plate. If necessary use packing plate under lock mechanism to ensure lock body is parallel to window edge. Screw lock mechanism to the frame. Check operation, then insert plastic plugs into lock body screw holes until flush.

### Additional Information

**Operation** - The window locks automatically when window is closed. Turn key clockwise to release.

**Safety Tips** - For child safety fit ERA Window Securistay Ref: 720, to restrict fully opening.

**Security Tips** - Always close and lock windows, removing keys from locks when leaving the house. Use 2 locks per window for added security

**Maintenance** - Use a moist cloth only, household abrasives or solvents may affect surface finish.

