




902-12 Flush Pivot Lock Fitting Instructions

Installing a Flush Pivot Lock

To fit a Flush Pivot Lock you will require the following tools:

- Bradawl (or drill with 2.5mm drillbit)
- Screwdrivers
- Mallet
- Chisel
- Pencil

If fitting to hardwood drill 2.5mm pilot holes.

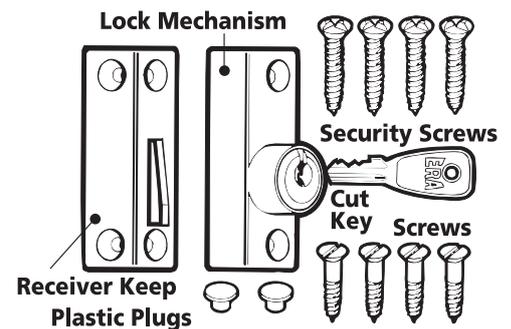

- Pivot Lock is suitable for pivoted windows where opening frame is flush with the fixed frame when closed. Close window, select position for pivot lock.
- Position receiver keep on fixed frame with top edge flush to the frame edge.
- If there is insufficient depth between frame and sill, position receiver keep on sill. Mark hole positions through top or side holes in receiver keep (dependant on window type). Screw receiver keep to fixed frame using slotted screws. Ensure flat, square fixing (recess if necessary).
- Position lock mechanism on opening frame above receiver keep. Ensure a 2mm gap is between the lock mechanism and receiver keep. Mark holes and screw into position using slotted screws with security screws provided. Place plastic plugs in holes not used.

Additional Information

Operation - Turn key clockwise to lock

Crime prevention tip - Use two locks for added security when windows are over 1 metre wide

Maintenance - Use a moist cloth only - household abrasives or solvents may affect the surface finish.

