







825-12 Transom Window Lock Fitting Instructions

Installing a Transom Window Lock

No tools are required to fit a Transom Window Lock.

- A** Close window. Transom Lock fits on the top hinged windows.
- B** Ensure locking pin is in retracted position.
- C** Slip Transom Lock over window stay and catch..
- D** Lock by turning locking pin clockwise with key supplied.

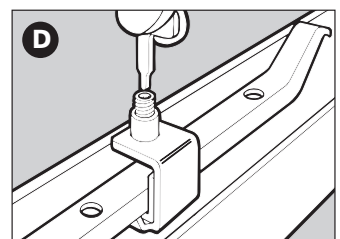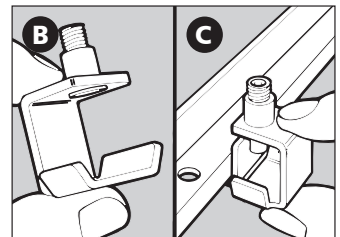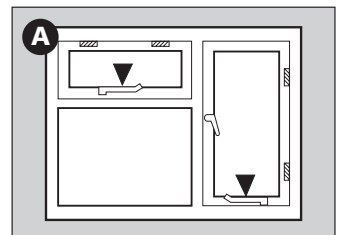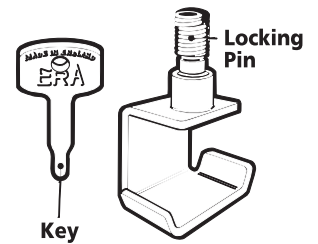

Additional Information

Operation - Using the key, turn anti-clockwise to release Transom Lock. To re-fit the lock simply repeat steps **A** and **D**.

Security Tip - For extra security for side hinged metal windows fit ERA Metal Window Lock Ref: 901 or Metal Window Snaplock Ref: 904

Maintenance - Use a moist cloth only, household abrasives or solvents may affect the surface finish - Lubrication may occasionally be required.