


# ERA

## 789 Door Restrictor Fitting Instructions

**This product is only suitable for installation on timber and solid core composite doors.**




To fit a Door Restrictor you will require the following tools:

- Screwdriver
- Bradawl (or drill with 2.5mm drill bit)
- Pencil

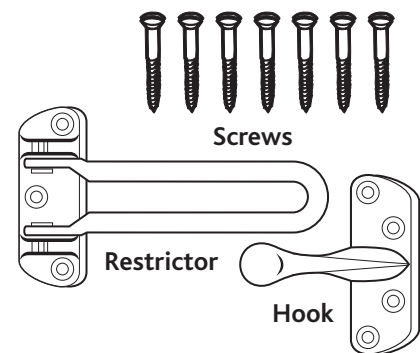

### Installing a Door Restrictor

- Select position for door restrictor.
- Mark screw holes for the restrictor on the door frame. Screw into position.
- Position hook on door level with the restrictor, ensuring the restrictor sits over hook, and screw into position.

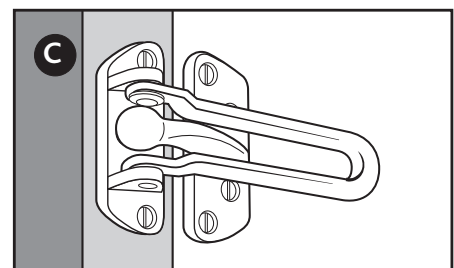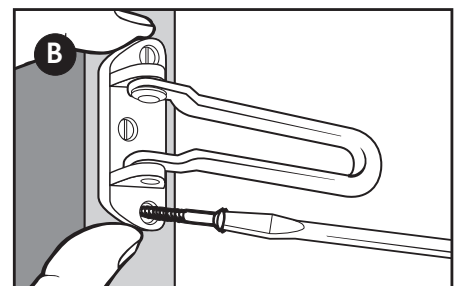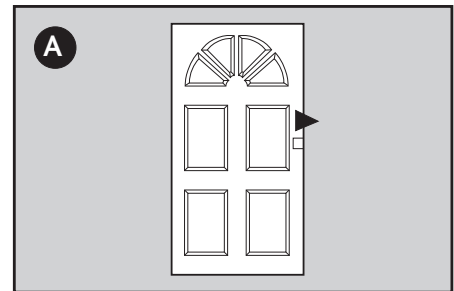

### Additional Information

**Operation** - Push the restrictor over the hook to restrict the door opening. Pull back restrictor away from door to enable the door to open.

**Crime Prevention Tip** - Always engage door restrictor and ask for identification before opening the door to strangers.

**Safety Tip** - For additional safety we recommend the use of an ERA 160° Door Viewer or ERA 180° Door Viewer.

**Maintenance** - Use a moist cloth only as household abrasives or solvents may affect surface finish.