


Door Knob - Concealed Fix Fitting Instructions

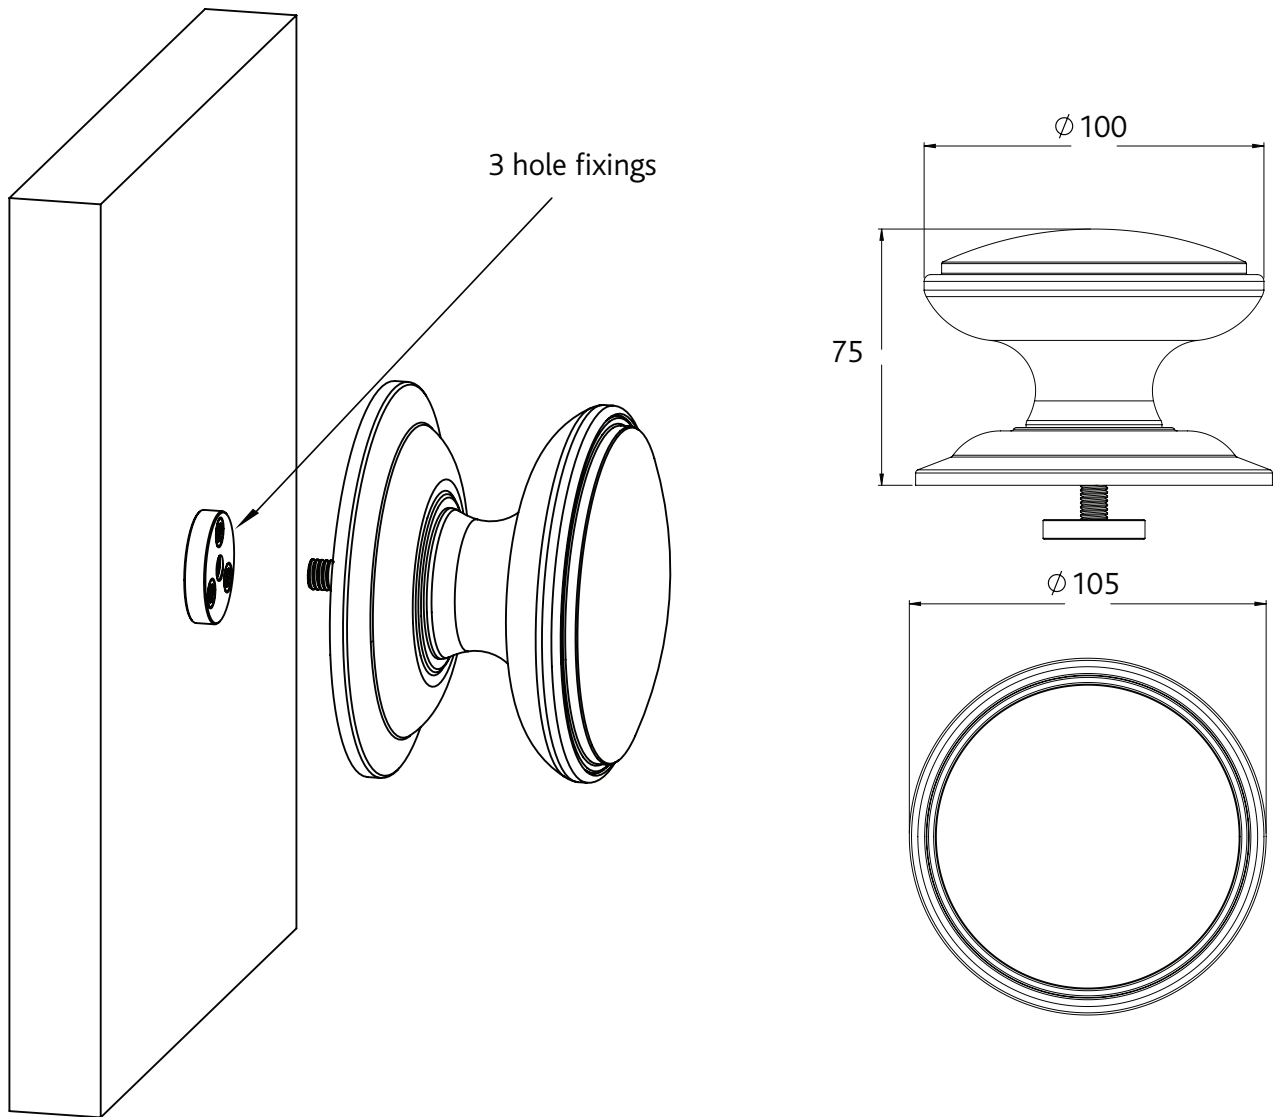

Hole prep (viewed from outside)

$\phi 9$ with 16mm Deep

